

JAGUAR

X150 – XK



From VIN B00379 to VIN B32752

TABLE OF CONTENTS

1 : General Information

100 : Service Information

100-00 : General Information *[page 1]*

Description and Operation

Application and Use of Specifications

General Service Information

Health and Safety Precautions

How To Use This Manual

Important Safety Instructions

Road/Roller Testing

Solvents, Sealants and Adhesives

Standard Workshop Practices

100-01 : Identification Codes *[page 39]*

Description and Operation

Identification Codes - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8

100-02 : Jacking and Lifting *[page 48]*

Description and Operation

Jacking
Lifting

100-04 : Noise, Vibration and Harshness *[page 52]*



Description and Operation

Noise, Vibration and Harshness (NVH)

Diagnosis and Testing

Noise, Vibration and Harshness (NVH)

2 : Chassis

204 : Suspension

204-00 : Suspension System - General Information *[page 1]*

Specifications

Specifications

General Procedures

Front Toe Adjustment (57.65.01)

Rear Toe Adjustment (57.65.08)

Four-Wheel Alignment

Description and Operation

Wheel Alignment Angles

Diagnosis and Testing

Suspension System

204-01 : Front Suspension *[page 37]*

Specifications

Specifications

Description and Operation

Front Suspension

Diagnosis and Testing

Front Suspension

Removal and Installation

Front Shock Absorber - 4.2L NA V8 - AJV8/4.2L SC V8 -
AJV8 (60.30.04)

Front Lower Arm (60.35.53)

Rear Lower Arm (60.35.54)

Rear Lower Arm Bushing (60.35.56)
Shock Absorber Bushing (60.30.16)
Front Stabilizer Bar - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8
(60.10.01)
Front Stabilizer Bar Link - 4.2L NA V8 - AJV8/4.2L SC V8 -
AJV8 (60.10.02)
Stabilizer Bar Link Bushing (60.10.03)
Upper Arm LH - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8
(60.35.41)
Upper Arm RH - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8
(60.35.42)
Front Wheel Bearing and Wheel Hub (60.25.03)
Wheel Knuckle (60.25.23)

204-02 : Rear Suspension *[page 89]*

Specifications
Specifications
Description and Operation
Rear Suspension
Diagnosis and Testing
Rear Suspension
Removal and Installation
Lower Arm - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8
(64.35.43)
Rear Shock Absorber - 4.2L NA V8 - AJV8/4.2L SC V8 -
AJV8 (64.30.02)
Rear Stabilizer Bar (64.35.08)
Rear Stabilizer Bar Link (64.35.24)
Rear Wheel Bearing - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8
(64.15.14)
Tie Bar

Upper Arm (64.25.31)
Wheel Knuckle - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8
(64.15.22)

 204-04 : Wheels and Tires *[page 131]*

Specifications

Specifications

Description and Operation

Wheels and Tires

Diagnosis and Testing

Wheels and Tires - VIN Range: B10572->B32752

Wheels and Tires - VIN Range: B00379->B10571

Removal and Installation

Wheel and Tire (74.20.05)

Tire Pressure Monitoring System (TPMS) Front Antenna

Tire Pressure Monitoring System (TPMS) Rear Antenna

Tire Pressure Monitoring System (TPMS) Module -

Convertible

Tire Pressure Monitoring System (TPMS) Module - 2-Door

Tire Low Pressure Sensor

Tire Pressure Monitoring System (TPMS) Receiver

204-05 : Vehicle Dynamic Suspension - 4.2L NA V8 - AJV8/4.2L
 SC V8 - AJV8 *[page 230]*

Specifications

Specifications

Description and Operation

Vehicle Dynamic Suspension

Diagnosis and Testing

Vehicle Dynamic Suspension

Removal and Installation

Adaptive Damping Module - Convertible (86.56.35)

Adaptive Damping Module - 2-Door (86.56.35)

Front Suspension Vertical Accelerometer

Rear Suspension Vertical Accelerometer

205 : Driveline



205-00 : Driveline System - General Information *[page 245]*



Diagnosis and Testing

Driveline System

205-01 : Driveshaft *[page 245]*



Specifications

Specifications

General Procedures

Driveshaft Runout and Balancing

Description and Operation

Driveshaft

Diagnosis and Testing

Driveshaft

Removal and Installation

Driveshaft - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8

(47.15.01)

205-02 : Rear Drive Axle/Differential *[page 277]*



Specifications

Specifications

Description and Operation

Rear Drive Axle and Differential - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8

Removal and Installation

Axle Assembly - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8,
Vehicles Without: Differential Drain Plug (51.25.13)

Axle Assembly - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8,
Vehicles With: Differential Drain Plug (51.25.13)

Axle Housing Bushing - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8 (64.25.30)

In Vehicle Repair

Drive Pinion Seal - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8
(51.20.01)

205-05 : Rear Drive Halfshafts [page 295]



Specifications

Specifications

Description and Operation

Rear Drive Halfshafts

Diagnosis and Testing

Rear Drive Halfshafts

Removal and Installation

Rear Halfshaft (47.10.13)

Inner Constant Velocity (CV) Joint Boot (47.10.33)

Outer Constant Velocity (CV) Joint Boot (47.10.32)

206 : Brake System



206-00 : Brake System - General Information [page 314]



Specifications

Specifications

General Procedures

Brake Disc Runout Check

Brake System Bleeding (70.25.03)

Diagnosis and Testing

Brake System

206-03 : Front Disc Brake - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8

[page 342]

Specifications

Specifications

Description and Operation

Front Disc Brake

Diagnosis and Testing

Front Disc Brake

Removal and Installation

Brake Caliper - Vehicles With: Standard Brakes (70.55.02)

Brake Caliper - Vehicles With: High Performance Brakes (70.55.02)

Brake Disc - Vehicles With: Standard Brakes (70.10.10)

Brake Disc - Vehicles With: High Performance Brakes (70.10.10)

Brake Pads - Vehicles With: Standard Brakes (70.40.02)

Brake Pads - Vehicles With: High Performance Brakes (70.40.02)

206-04 : Rear Disc Brake - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8

[page 369]

Specifications

- Specifications
- Description and Operation
 - Rear Disc Brake
- Diagnosis and Testing
 - Rear Disc Brake
- Removal and Installation
 - Brake Caliper (70.55.03)
 - Brake Disc (70.10.11)
 - Brake Pads (70.40.03)

 206-05 : Parking Brake and Actuation *[page 385]*

- Specifications
 - Specifications
- General Procedures
 - Parking Brake Cable Tension Release
- Description and Operation
 - Parking Brake
- Diagnosis and Testing
 - Parking Brake
- Removal and Installation
 - Parking Brake Cable LH - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8
 - Parking Brake Cable RH - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8
 - Parking Brake Module - Convertible (70.35.47)
 - Parking Brake Module - 2-Door (70.35.47)
 - Parking Brake Release Actuator - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8 (70.35.45)
 - Parking Brake Switch - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8 (70.35.46)

206-06 : Hydraulic Brake Actuation [page 419]



Specifications

Specifications

Description and Operation

Hydraulic Brake Actuation

Diagnosis and Testing

Hydraulic Brake Actuation

Removal and Installation

Brake Master Cylinder - LHD RWD (70.30.08)

Brake Master Cylinder - RHD RWD (70.30.08)

Brake Fluid Reservoir (70.30.16)

Brake Pedal and Bracket (70.35.03)

206-07 : Power Brake Actuation [page 445]



Specifications

Specifications

Description and Operation

Brake Booster

Diagnosis and Testing

Power Brake System

Removal and Installation

Brake Booster - LHD RWD (70.50.17)

Brake Booster - RHD RWD (70.50.17)

206-09 : Anti-Lock Control - Stability Assist [page 455]



Specifications

Specifications

Description and Operation

Anti-Lock Control - Stability Assist - 4.2L NA V8 - AJV8/4.2L
SC V8 - AJV8

Diagnosis and Testing

Anti-Lock Control - Stability Assist

Removal and Installation

Anti-Lock Brake System (ABS) Module (70.60.02)

Front Wheel Speed Sensor - 4.2L NA V8 - AJV8/4.2L SC V8
- AJV8 (70.60.03)

Hydraulic Control Unit (HCU) (70.60.18)

Rear Wheel Speed Sensor - 4.2L NA V8 - AJV8/4.2L SC V8 -
AJV8 (70.60.04)

Yaw Rate Sensor and Accelerometer (86.56.64)

211 : Steering System



211-00 : Steering System - General Information *[page 480]*



Specifications

Specifications

General Procedures

Power Steering System Bleeding (57.15.02)

Power Steering System Flushing (57.15.08)

Diagnosis and Testing

Steering System

211-02 : Power Steering - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8

[page 515]



Specifications

Specifications

Description and Operation

Power Steering

Diagnosis and Testing

Power Steering

Removal and Installation

Power Steering Fluid Cooler - 4.2L NA V8 - AJV8

(57.15.11)

Power Steering Fluid Cooler - 4.2L SC V8 - AJV8 (57.15.11)

Power Steering Fluid Reservoir - 4.2L NA V8 - AJV8

(57.15.08)

Power Steering Fluid Reservoir - 4.2L SC V8 - AJV8

(57.15.08)

Power Steering Pump - 4.2L NA V8 - AJV8 (57.20.14)

Power Steering Pump - 4.2L SC V8 - AJV8 (57.20.14)

Steering Gear (57.10.01)

Steering Gear Bushing (57.10.30)

Steering Angle Sensor

211-03 : Steering Linkage [page 568]



Specifications

Specifications

Description and Operation

Steering Linkage

Diagnosis and Testing

Steering Linkage

Removal and Installation

Steering Gear Boot (57.10.29)

Tie Rod End - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8

(57.55.02)

211-04 : Steering Column [page 577]



Specifications

Specifications

Description and Operation

Steering Column

Diagnosis and Testing

Steering Column

Removal and Installation

Steering Column (57.40.01)

Steering Column Lower Shaft (57.40.05)

Steering Wheel (57.60.01)

Clockspring

211-05 : Steering Column Switches [page 612]



Specifications

Specifications

Description and Operation

Steering Column Switches

Diagnosis and Testing

Steering Column Switches

Removal and Installation

Steering Column Lock Actuator (57.40.41)

Steering Column Multifunction Switch LH (86.65.78)

Steering Column Multifunction Switch RH (86.65.41)

3 : Powertrain



303 : Engine



303-00 : Engine System - General Information *[page 1]*



Specifications

Specifications

General Procedures

Bearing Inspection

Camshaft Bearing Journal Clearance

Camshaft Bearing Journal Diameter

Camshaft End Play

Camshaft Lobe Lift

Camshaft Surface Inspection

Connecting Rod Cleaning

Connecting Rod Large End Bore

Crankshaft End Play

Crankshaft Main Bearing Journal Clearance

Cylinder Bore Out-of-Round

Cylinder Head Distortion

Exhaust Manifold Cleaning and Inspection

Piston Inspection

Piston Pin Diameter

Piston Pin to Bore Diameter

Piston Ring End Gap

Piston Ring-to-Groove Clearance

Valve Spring Free Length

Valve Stem Diameter

Diagnosis and Testing

Engine

303-01A : Engine - 4.2L SC V8 - AJV8 [page 35]



Specifications

Specifications

General Procedures

Valve Clearance Adjustment (12.29.48)

Valve Clearance Check (12.29.47)

Engine Oil Draining and Filling

Description and Operation

Engine

Diagnosis and Testing

Engine

Removal and Installation

Crankshaft Main Bearing Carrier

Removal

Engine (12.41.01)

Installation

Engine (12.41.01)

In Vehicle Repair

Camshafts LH (12.13.19)

Camshafts RH (12.13.18)

Crankshaft Front Seal (12.21.14)

Crankshaft Pulley (12.21.09)

Crankshaft Rear Seal (12.21.20)

Cylinder Head LH (12.29.02)

Engine Front Cover (12.65.01)

Engine Mount LH (12.45.01)

Engine Mount RH (12.45.03)

Exhaust Manifold LH - Vehicles With: Secondary Air

Injection (AIR) (30.15.55)

Exhaust Manifold RH - Vehicles Without: Secondary Air

Injection (AIR) (30.15.56)

Exhaust Manifold RH - Vehicles With: Secondary Air

Injection (AIR) (30.15.56)

Flexplate (12.53.13)

Oil Pan (12.60.44)

Oil Pump (12.60.26)

Timing Drive Components (12.65.13)

Valve Cover LH (12.29.43)

Valve Cover RH (12.29.44)

Oil Filter Housing

Oil Level Indicator and Tube

Oil Cooler (12.60.68)

Twin Oil Coolers

Disassembly

Engine

Disassembly/Assembly of subassemblies

Cylinder Head (12.29.22)

Assembly

Engine

303-01B : Engine - 4.2L NA V8 - AJV8 *[page 371]*



Specifications

Specifications

General Procedures

Valve Clearance Adjustment (12.29.48)

Valve Clearance Check (12.29.47)

Engine Oil Draining and Filling

Description and Operation

Engine

Diagnosis and Testing

Engine

Removal and Installation

Crankshaft Main Bearing Carrier

Removal

Engine (12.41.01)

Installation

Engine (12.41.01)

In Vehicle Repair

Camshafts LH (12.13.19)

Camshafts RH (12.13.18)

Crankshaft Front Seal (12.21.14)

Crankshaft Pulley (12.21.09)

Crankshaft Rear Seal (12.21.20)

Cylinder Head LH (12.29.02)

Engine Front Cover (12.65.01)

Engine Mount LH (12.45.01)

Engine Mount RH (12.45.03)

Exhaust Manifold LH - Vehicles Without: Secondary Air

Injection (AIR) (30.15.55)

Exhaust Manifold LH - Vehicles With: Secondary Air

Injection (AIR) (30.15.55)

Exhaust Manifold RH - Vehicles Without: Secondary Air

Injection (AIR) (30.15.56)

Exhaust Manifold RH - Vehicles With: Secondary Air

Injection (AIR) (30.15.56)

Flexplate (12.53.13)

Intake Manifold (30.15.01)

Oil Pan (12.60.44)

Oil Pump (12.60.26)

Timing Drive Components (12.65.13)

Valve Cover LH (12.29.43)

Valve Cover RH (12.29.44)

Oil Filter Housing

Oil Level Indicator and Tube

Disassembly

Engine

Disassembly/Assembly of subassemblies

Cylinder Head (12.29.22)

Assembly

Engine

303-03A : Engine Cooling - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8

☐ [page 762]

Specifications

Specifications

General Procedures

Cooling System Draining, Filling and Bleeding - 4.2L NA V8
- AJV8

Cooling System Draining, Filling and Bleeding - 4.2L SC V8
- AJV8

Cooling System Draining and Vacuum Filling

Cooling System Flushing

Description and Operation

Engine Cooling - 4.2L NA V8 - AJV8

Engine Cooling - 4.2L SC V8 - AJV8

Diagnosis and Testing

Engine Cooling

Removal and Installation

Coolant Expansion Tank (26.15.01)

Cooling Fan Motor and Shroud - Vehicles Without:
Supercharger (26.25.25)

Cooling Fan Motor and Shroud - Vehicles With:
Supercharger (26.25.25)

Radiator - Vehicles Without: Supercharger (26.40.01)

Radiator - Vehicles With: Supercharger (26.40.01)

Thermostat - Vehicles With: Supercharger (26.45.07)

Thermostat - Vehicles Without: Supercharger (26.45.07)
Thermostat Housing - Vehicles Without: Supercharger
Coolant Manifold - Vehicles With: Supercharger
Coolant Pump - Vehicles Without: Supercharger
Coolant Pump - Vehicles With: Supercharger

303-03B : Supercharger Cooling - 4.2L NA V8 - AJV8/4.2L SC V8

 - AJV8 [page 867]

Removal and Installation

Coolant Pump

Radiator

303-04A : Fuel Charging and Controls - 4.2L SC V8 - AJV8 [page

 876]

Specifications

Specifications

Diagnosis and Testing

Fuel Charging and Controls

Removal and Installation

Fuel Injection Supply Manifold (19.60.13)

Fuel Injector (18.10.01)

Throttle Body (19.70.04)

303-04B : Fuel Charging and Controls - 4.2L NA V8 - AJV8 [page

 891]

Specifications

Specifications

Description and Operation

Fuel Charging and Controls

Fuel Charging and Controls

Diagnosis and Testing

Fuel Charging and Controls - 4.2L NA V8 - AJV8/4.2L SC V8
- AJV8

Removal and Installation

Fuel Injection Supply Manifold (19.60.13)

Fuel Injector (18.10.01)

Throttle Body (19.70.04)

303-05 : Accessory Drive - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8

▣ [page 928]

Specifications

Specifications

Description and Operation

Accessory Drive - 4.2L NA V8 - AJV8

Accessory Drive - 4.2L SC V8 - AJV8

Diagnosis and Testing

Accessory Drive

Removal and Installation

Accessory Drive Belt - 4.2L NA V8 - AJV8 (12.10.40)

Accessory Drive Belt - 4.2L SC V8 - AJV8 (12.10.40)

Accessory Drive Belt Tensioner - 4.2L NA V8 - AJV8
(12.10.41)

Accessory Drive Belt Tensioner - 4.2L SC V8 - AJV8
(12.10.41)

Accessory Drive Belt Idler Pulley - 4.2L NA V8 - AJV8
(12.10.43)

Accessory Drive Belt Idler Pulley - 4.2L SC V8 - AJV8
(12.10.43)

Supercharger Belt (18.50.08)

Supercharger Belt Tensioner (18.50.24)

Supercharger Belt Idler Pulley (18.50.09)

303-06 : Starting System - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8

▣ *[page 961]*

Specifications

Specifications

Description and Operation

Starting System

Diagnosis and Testing

Starting System

Removal and Installation

Starter Motor (86.60.01)

Start Control Unit

303-07 : Engine Ignition - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8

▣ *[page 980]*

Specifications

Specifications

Description and Operation

Engine Ignition

Diagnosis and Testing

Engine Ignition

Removal and Installation

Spark Plugs - 4.2L NA V8 - AJV8 (18.20.02)

Spark Plugs - 4.2L SC V8 - AJV8 (18.20.02)

Ignition Coil-On-Plug - 4.2L NA V8 - AJV8 (18.20.40)

Ignition Coil-On-Plug - 4.2L SC V8 - AJV8 (18.20.40)

303-08A : Engine Emission Control - 4.2L SC V8 - AJV8 *[page*

▣ *1003]*

Specifications

Specifications

Description and Operation

- Engine Emission Control
- Diagnosis and Testing
 - Engine Emission Control
- Removal and Installation
 - Exhaust Gas Recirculation (EGR) Valve (17.45.01)
 - Positive Crankcase Ventilation (PCV) Valve
 - Secondary Air Injection (AIR) Control Valve to Exhaust
- Manifold Tube
 - Secondary Air Injection (AIR) Control Valve
 - Secondary Air Injection (AIR) Pump
 - Secondary Air Injection Manifold Absolute Pressure
- Sensor

303-08B : Engine Emission Control - 4.2L NA V8 - AJV8 [page
1024]

- Specifications
 - Specifications
- Description and Operation
 - Engine Emission Control
 - Engine Emission Control
- Diagnosis and Testing
 - Engine Emission Control
- Removal and Installation
 - Exhaust Gas Recirculation (EGR) Valve (17.45.01)
 - Positive Crankcase Ventilation (PCV) Valve
 - Secondary Air Injection (AIR) Control Valve to Exhaust
- Manifold Tube
 - Secondary Air Injection (AIR) Control Valve
 - Secondary Air Injection (AIR) Pump
 - Secondary Air Injection Manifold Absolute Pressure
- Sensor

303-12A : Intake Air Distribution and Filtering - 4.2L SC V8 -

▣ AJV8 [page 1059]

Specifications

Specifications

Description and Operation

Intake Air Distribution and Filtering

Diagnosis and Testing

Intake Air Distribution and Filtering

Removal and Installation

Air Cleaner (19.10.05)

Air Cleaner Element (19.10.08)

Air Cleaner Outlet Pipe (19.10.31)

Intake Air Resonator

Charge Air Cooler LH (18.50.19)

Charge Air Cooler RH (18.50.18)

Supercharger (18.50.15)

Supercharger Outlet Pipe (18.50.16)

Throttle Body Elbow (19.70.28)

303-12B : Intake Air Distribution and Filtering - 4.2L NA V8 -

▣ AJV8 [page 1085]

Specifications

Specifications

Description and Operation

Intake Air Distribution and Filtering

Intake Air Distribution and Filtering

Diagnosis and Testing

Intake Air Distribution and Filtering

Removal and Installation

Air Cleaner (19.10.05)

Air Cleaner Element (19.10.08)

Air Cleaner Outlet Pipe (19.10.31)

303-13 : Evaporative Emissions - 4.2L NA V8 - AJV8/4.2L SC V8 -

▣ AJV8 [page 1105]

Specifications

Specifications

Description and Operation

Evaporative Emissions - 4.2L NA V8 - AJV8

Evaporative Emissions - 4.2L SC V8 - AJV8

Diagnosis and Testing

Evaporative Emissions

Removal and Installation

Evaporative Emission Canister - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8 (17.15.13)

Evaporative Emission Canister Purge Valve - 4.2L NA V8 - AJV8 (17.15.30)

Evaporative Emission Canister Purge Valve - 4.2L SC V8 - AJV8 (17.15.30)

303-14A : Electronic Engine Controls - 4.2L SC V8 - AJV8 [page

▣ 1140]

Specifications

Specifications

General Procedures

Powertrain Control Module (PCM) Long Drive Cycle Self-Test

Powertrain Control Module (PCM) Short Drive Cycle Self-Test

Description and Operation

Electronic Engine Controls

Diagnosis and Testing

Electronic Engine Controls

Removal and Installation

Camshaft Position (CMP) Sensor LH (18.31.12)

Camshaft Position (CMP) Sensor RH (18.31.11)

Catalyst Monitor Sensor (18.30.66)

Crankshaft Position (CKP) Sensor (18.30.12)

Engine Control Module (ECM) (18.30.01)

Engine Coolant Temperature (ECT) Sensor (18.30.10)

Fuel Rail Pressure (FRP) Sensor (18.30.98)

Fuel Temperature Sensor (18.30.99)

Heated Oxygen Sensor (HO2S)

Knock Sensor (KS) (18.30.69)

Manifold Absolute Pressure (MAP) Sensor (18.30.86)

Mass Air Flow (MAF) Sensor (18.30.15)

Variable Camshaft Timing (VCT) Oil Control Solenoid
(18.30.90)

Brake Pedal Position (BPP) Switch

Oil Temperature Sensor (18.31.01)

Engine Oil Pressure (EOP) Sensor

Intake Air Temperature (IAT) Sensor (18.30.52)

303-14B : Electronic Engine Controls - 4.2L NA V8 - AJV8 [page
1294]

Specifications

Specifications

General Procedures

Powertrain Control Module (PCM) Long Drive Cycle Self-
Test

Powertrain Control Module (PCM) Short Drive Cycle Self-
Test

Description and Operation

Electronic Engine Controls

- Electronic Engine Controls
- Diagnosis and Testing
 - Electronic Engine Controls
- Removal and Installation
 - Camshaft Position (CMP) Sensor LH (18.31.12)
 - Camshaft Position (CMP) Sensor RH (18.31.11)
 - Catalyst Monitor Sensor (18.30.66)
 - Crankshaft Position (CKP) Sensor (18.30.12)
 - Engine Control Module (ECM) (18.30.01)
 - Engine Coolant Temperature (ECT) Sensor (18.30.10)
 - Fuel Rail Pressure (FRP) Sensor (18.30.98)
 - Fuel Temperature Sensor (18.30.99)
 - Heated Oxygen Sensor (HO2S)
 - Knock Sensor (KS) (18.30.69)
 - Manifold Absolute Pressure (MAP) Sensor (18.30.86)
 - Mass Air Flow (MAF) Sensor (18.30.15)
 - Variable Camshaft Timing (VCT) Oil Control Solenoid (18.30.90)
 - Engine Oil Pressure (EOP) Sensor
 - Oil Temperature Sensor (18.31.01)
 - Brake Pedal Position (BPP) Switch

307 : Automatic Transmission/Transaxle



307-01 : Automatic Transmission/Transaxle [page 1441]



- Specifications
 - Specifications
- General Procedures
 - Transmission Fluid Drain and Refill (44.24.02)
 - Transmission Fluid Level Check

Description and Operation

Transmission Description

Diagnosis and Testing

Diagnostic Strategy

Removal

Transmission (44.20.01)

Installation

Transmission (44.20.01)

In Vehicle Repair

Extension Housing Seal (44.20.18)

Transmission Fluid Pan, Gasket and Filter (44.24.07)

Transmission Control Module (TCM) and Main Control

Valve Body

Transmission Support Insulator (12.45.04)

Selector Shaft Seal

307-02 : Transmission/Transaxle Cooling [page 1557]



Specifications

Specifications

Description and Operation

Transmission Cooling

Diagnosis and Testing

Transmission Cooling

307-05 : Automatic Transmission/Transaxle External Controls

 *[page XXX]*

Specifications

Specifications

General Procedures

Selector Lever Cable Adjustment (44.15.07)

Description and Operation

External Controls

Diagnosis and Testing

External Controls

Removal and Installation

Downshift Paddle Switch

Selector Lever Assembly (44.15.04)

Selector Lever Cable and Bracket (44.15.08)

Selector Lever Knob (44.15.06)

Upshift Paddle Switch

309 : Exhaust System



309-00 : Exhaust System - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8

[page 1586]

Specifications

Specifications

Description and Operation

Exhaust System - 4.2L NA V8 - AJV8

Exhaust System - 4.2L SC V8 - AJV8

Diagnosis and Testing

Exhaust System

Removal and Installation

Catalytic Converter (17.50.05)

Exhaust System

Front Muffler (30.10.18)

Muffler and Tailpipe (30.10.52)

Exhaust Sound Enhancement Vacuum Pump

Exhaust Sound Enhancement Valve

310 : Fuel System



310-00 : Fuel System - General Information [page 1613]



Specifications

Specifications

General Procedures

Fuel System Pressure Release (19.50.02)

Fuel Tank Draining

Quick Release Coupling

Quick Release Coupling - Push Connect

Spring Lock Couplings

310-01 : Fuel Tank and Lines [page XXX]



Specifications

Specifications

Description and Operation

Fuel Tank and Lines

Diagnosis and Testing

Fuel Tank and Lines

Removal and Installation

Fuel Filter (19.25.02)

Fuel Level Sender

Fuel Pump Module (19.45.08)

Fuel Tank (19.55.01)

Fuel Tank Filler Pipe (19.55.33)

310-02 : Acceleration Control [page 1680]



Specifications

- Specifications
- Description and Operation
 - Acceleration Control
- Diagnosis and Testing
 - Acceleration Control
- Removal and Installation
 - Accelerator Pedal (19.20.01)

310-03 : Speed Control - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8

📖 *[page 1691]*

- Specifications
 - Specifications
- General Procedures
 - Speed Control Sensor Adjustment
- Description and Operation
 - Speed Control
- Diagnosis and Testing
 - Speed Control
- Removal and Installation
 - Speed Control Deactivator Switch (19.75.20)
 - Speed Control Module - Vehicles Without: Adaptive
- Speed Control (19.75.26)
 - Speed Control Module - Vehicles With: Adaptive Speed
- Control (19.75.26)
 - Speed Control Sensor
 - Speed Control Switch (19.75.25)

4 : Electrical

412 : Climate Control System

412-00 : Climate Control System - General Information *[page 1]*

Specifications

Specifications

General Procedures

Air Conditioning (A/C) System Flushing

Air Conditioning (A/C) System Recovery, Evacuation and
Charging (82.30.30)

Contaminated Refrigerant Handling

Electronic Leak Detection

Fluorescent Dye Leak Detection

Refrigerant Oil Adding

Refrigerant System Tests

Diagnosis and Testing

Climate Control System

412-01 : Air Distribution and Filtering *[page 19]*

Specifications

Specifications

Description and Operation

Air Distribution and Filtering

Diagnosis and Testing

Air Distribution and Filtering

Removal and Installation

Center Registers (82.20.38)

Driver Side Register (82.20.39)
Passenger Side Register (82.20.40)
Pollen Filter (76.10.09)

412-02 : Heating and Ventilation [page 41]



Specifications

Specifications

Description and Operation

Heating and Ventilation

Diagnosis and Testing

Heating and Ventilation

Removal and Installation

Auxiliary Coolant Flow Pump - 4.2L NA V8 - AJV8
(82.25.59)

Auxiliary Coolant Flow Pump - 4.2L SC V8 - AJV8
(82.25.59)

Blower Motor (82.25.66)

Heater Core (80.20.29)

Heater Core and Evaporator Core Housing (82.25.21)

412-03 : Air Conditioning [page 50]



Specifications

Specifications

Description and Operation

Air Conditioning

Diagnosis and Testing

Air Conditioning

Removal and Installation

Air Conditioning (A/C) Compressor - 4.2L NA V8 - AJV8

(82.10.20)

Air Conditioning (A/C) Compressor - 4.2L SC V8 - AJV8

(82.10.20)

Blower Motor Resistor

Condenser Core - 4.2L NA V8 - AJV8 (82.15.07)

Condenser Core - 4.2L SC V8 - AJV8 (82.15.07)

Evaporator Core (82.25.20)

Pressure Cutoff Switch (82.10.32)

Thermostatic Expansion Valve (82.25.01)

412-04 : Control Components *[page 89]*



Specifications

Specifications

Description and Operation

Control Components

Diagnosis and Testing

Control Components

Removal and Installation

Ambient Air Temperature Sensor (82.20.02)

Defrost Vent/Register Blend Door Actuator LH

Defrost Vent/Register Blend Door Actuator RH

Footwell Vent/Duct Blend Door Actuator LH

Footwell Vent/Duct Blend Door Actuator RH

In-Vehicle Temperature Sensor (82.20.03)

Recirculation Blend Door Actuator (82.20.67)

Sunload Sensor (82.20.70)

Climate Control Module

Climate Control Assembly (82.20.07)

413 : Instrumentation and Warning Systems



413-00 : Instrument Cluster and Panel Illumination *[page 130]*



Description and Operation

Instrument Cluster and Panel Illumination

Diagnosis and Testing

Instrument Cluster and Panel Illumination

413-01 : Instrument Cluster *[page 135]*



Specifications

Specifications

Description and Operation

Instrument Cluster

Diagnosis and Testing

Instrument Cluster

Removal and Installation

Instrument Cluster (88.20.01)

413-06 : Horn *[page 169]*



Specifications

Specifications

Description and Operation

Horn

Diagnosis and Testing

Horn

Removal and Installation

Horn (86.30.02)

413-08 : Information and Message Center *[page 177]*



Description and Operation

Information and Message Center

Diagnosis and Testing

Information and Message Center

413-09 : Warning Devices *[page 194]*



Diagnosis and Testing

Warning Devices

Removal and Installation

Low Washer Fluid Warning Indicator Switch (84.10.17)

413-13 : Parking Aid *[page 197]*



Specifications

Specifications

Description and Operation

Parking Aid

Diagnosis and Testing

Parking Aid

Removal and Installation

Parking Aid Module (86.80.39)

Rear Parking Aid Sensor (86.54.14)

Front Inner Parking Aid Sensor (86.54.21)

Front Outer Parking Aid Sensor (86.54.22)

414 : Battery and Charging System



414-00 : Charging System - General Information [page 226]



- General Procedures
 - Battery Charging
- Diagnosis and Testing
 - Charging System

414-01 : Battery, Mounting and Cables [page 240]



- Specifications
 - Specifications
- Description and Operation
 - Battery and Cables
- Diagnosis and Testing
 - Battery
- Removal and Installation
 - Battery (86.15.01)

414-02 : Generator and Regulator - 4.2L NA V8 - AJV8/4.2L SC

 **V8 - AJV8 [page 252]**

- Specifications
 - Specifications
- Description and Operation
 - Generator
- Diagnosis and Testing
 - Generator
- Removal and Installation
 - Generator - 4.2L NA V8 - AJV8 (86.10.02)
 - Generator - 4.2L SC V8 - AJV8 (86.10.02)

415 : Information and Entertainment Systems



415-00 : Information and Entertainment System - General

Information *[page 264]*

Diagnosis and Testing

Audio System

Cellular Phone

415-01 : Audio Unit *[page 308]*



Specifications

Specifications

Description and Operation

Audio System

Diagnosis and Testing

Audio System

Removal and Installation

Amplifier (86.50.10)

Audio Unit (86.50.03)

Steering Wheel Audio Controls (86.50.42)

415-02 : Antenna *[page 327]*



Specifications

Specifications

Description and Operation

Antenna

Diagnosis and Testing

Antenna

Removal and Installation

Antenna (86.51.17.60)

415-03 : Speakers *[page 340]*



Specifications

Specifications

Description and Operation

Speakers

Diagnosis and Testing

Speakers

Removal and Installation

Front Door Speaker (86.50.13)

Front Door Tweeter Speaker (86.50.63)

Subwoofer Speaker (86.51.05)

Quarter Panel Speaker - 2-Door (86.50.12)

Quarter Panel Speaker - Convertible (86.50.12)

417 : Lighting



417-01 : Exterior Lighting *[page 357]*



Specifications

Specifications

General Procedures

Front Fog Lamp Adjustment

Headlamp Adjustment (86.40.18)

Description and Operation

Exterior Lighting

Diagnosis and Testing

Headlamps

Removal and Installation

- Front Fog Lamp (86.40.96)
- Headlamp Assembly (86.41.33)
- Headlamp Bulb - Vehicles With: High Intensity Discharge
- Headlamps (86.42.14)
 - Headlamp Leveling Module
 - Headlamp Leveling Front Sensor
 - Headlamp Leveling Rear Sensor
- High Mounted Stoplamp (86.41.01)
- Rear Lamp Assembly (86.40.70)
- Fog Lamp Bulb
- Rear Fog and Reversing Lamp - 2-Door
- Rear Fog and Reversing Lamp - Convertible

417-02 : Interior Lighting *[page 446]*



- Description and Operation
 - Interior Lighting
- Diagnosis and Testing
 - Interior Lighting

417-04 : Daytime Running Lamps (DRL) *[page 451]*



- Description and Operation
 - Daytime Running Lamps (DRL)
- Diagnosis and Testing
 - Daytime Running Lamps (DRL)

418 : Electrical Distribution



418-00 : Module Communications Network *[page 454]*



Specifications

Specifications

Description and Operation

Communications Network

Diagnosis and Testing

Communications Network

Removal and Installation

Auxiliary Junction Box (AJB) (86.70.55)

Central Junction Box (CJB) (86.70.72)

418-01 : Module Configuration [page 496]



Diagnosis and Testing

Module Configuration

418-02 : Wiring Harnesses - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8

 *[page 498]*

Removal and Installation

Engine Wiring Harness - 4.2L NA V8 - AJV8

Engine Wiring Harness - 4.2L SC V8 - AJV8

419 : Electronic Feature Group



419-01A : Anti-Theft - Active [page 529]



Specifications

Specifications

Description and Operation

- Anti-Theft - Active
- Diagnosis and Testing
 - Anti-Theft - Active
- Removal and Installation
 - Antenna
 - Anti-Theft Alarm Horn (86.52.03)
 - Rear Intrusion Sensor

419-01B : Anti-Theft - Passive *[page 559]*



- General Procedures
 - Anti-Theft Security Access
 - Key Programming Using Diagnostic Equipment
- Description and Operation
 - Anti-Theft - Passive
- Diagnosis and Testing
 - Anti-Theft - Passive

419-02 : Remote Convenience *[page 561]*



- General Procedures
 - Universal Transmitter Programming
- Diagnosis and Testing
 - Universal Transmitter

419-07 : Navigation System *[page 573]*



- Specifications
 - Specifications
- Description and Operation

- Navigation System
- Diagnosis and Testing
 - Navigation System
- Removal and Installation
 - Navigation System Antenna (86.62.06)
 - Navigation System Display Module (86.62.07)
 - Navigation System Module (86.62.05)

419-08 : Cellular Phone *[page 614]*



- Specifications
 - Specifications
- Description and Operation
 - Cellular Phone
- Removal and Installation
 - Cellular Phone Antenna (86.51.17)
 - Transceiver Module

419-10 : Multifunction Electronic Modules *[page 622]*



- Specifications
 - Specifications
- Description and Operation
 - Module Controlled Functions
- Diagnosis and Testing
 - Multifunction Electronic Module
- Removal and Installation
 - Driver Seat Module (DSM) (86.75.28)
 - Information and Entertainment Module (86.53.48)
 - Remote Keyless Entry (RKE) Module

5 : Body and Paint

501 : Body and Paint

501-02 : Front End Body Panels *[page 1]*

Removal and Installation

Air Deflector (76.11.41)

Cowl Vent Screen (76.10.01)

Fender Splash Shield (76.10.90)

Radiator Splash Shield (76.22.90)

501-03 : Body Closures *[page 9]*

Specifications

Specifications

General Procedures

Hood Alignment (76.16.02)

Luggage Compartment Lid Alignment (76.19.03)

Liftgate Alignment (76.19.54.60)

Removal and Installation

Hood (76.16.01)

Luggage Compartment Lid (76.19.01)

Door (76.28.04)

Door Check Arm

Liftgate

501-05 : Interior Trim and Ornamentation *[page 41]*

Specifications

Specifications

Removal and Installation

A-Pillar Trim Panel (76.13.31)

B-Pillar Trim Panel (76.13.28)

Engine Cover (76.11.35)

Front Door Trim Panel (76.34.01)

Headliner (76.64.01)

Parcel Shelf (76.67.06)

Front Scuff Plate Trim Panel (76.13.81)

Scuff Plate Trim Panel (76.13.81)

Sun Visor (76.10.48)

Liftgate Upper Trim Panel (76.34.11)

Liftgate Lower Trim Panel

Rear Quarter Trim Panel - 2-Door (76.13.73)

Rear Quarter Trim Panel - Convertible (76.13.73)

Rear Quarter Trim Sliding Panel

Loadspace Trim Panel - 2-Door (76.13.73.60)

Loadspace Trim Panel - Convertible (76.13.73.60)

Luggage Compartment Lid Trim Panel (76.19.05)

501-08 : Exterior Trim and Ornamentation [page 81]



Specifications

Specifications

Removal and Installation

Front Fender Moulding (76.10.48)

Rear Spoiler (76.19.86.60)

Rocker Panel Moulding (76.11.36)

501-09 : Rear View Mirrors [page 91]



Specifications

Specifications

Description and Operation

Rear View Mirrors

Diagnosis and Testing

Rear View Mirrors

Removal and Installation

Auto-Dimming Interior Mirror (76.10.56)

Exterior Mirror (76.10.52)

Exterior Mirror Glass (76.10.53)

Exterior Mirror Motor (76.10.57)

501-10 : Seating *[page 110]*



Specifications

Specifications

Description and Operation

Seats

Diagnosis and Testing

Seats

Removal and Installation

Front Seat (76.70.01)

Front Seat Backrest Cover (76.70.15)

Front Seat Control Switch (86.75.46)

Front Seat Cushion Cover (76.70.33)

Front Seat Lumbar Motor (86.75.44)

Front Seat Recliner Motor (86.75.04)

Rear Seat Armrest (76.70.39)

Rear Seat Backrest (76.70.38)

Rear Seat Cushion (76.70.37)

Front Seat Backrest Heater Mat (86.75.14)

Front Seat Cushion Heater Mat (86.75.13)
Seat Track
Assembly & Disassembly
Rear Seat Backrest - Vehicles With: 40/20/40 Split Seat
(76.70.48)

 501-11 : Glass, Frames and Mechanisms [page 204]

Specifications
Specifications
General Procedures
Door Window Motor Initialization
Door Window Glass Adjustment (76.31.03)
Description and Operation
Glass, Frames and Mechanisms
Diagnosis and Testing
Glass, Frames and Mechanisms
Removal and Installation
Front Door Window Glass (76.31.01)
Front Door Window Regulator Motor (76.31.45)
Front Door Window Regulator
Window Control Switch (86.25.08)
Rear Quarter Window Glass - Convertible (76.31.31)
Windshield Glass (76.81.40)
Rear Quarter Window Glass - 2-Door (76.31.31)
Rear Quarter Window Regulator Motor (86.25.11)

 501-12 : Instrument Panel and Console [page 247]

Specifications
Specifications

Description and Operation

Instrument Panel

Removal and Installation

Floor Console (76.25.01)

Floor Console Finish Panel (76.47.26)

Glove Compartment (76.52.03)

Instrument Panel (76.46.01)

Overhead Console (76.13.69)

Instrument Panel Lower Trim Panel (76.46.11)

501-14 : Handles, Locks, Latches and Entry Systems *[page 275]*

Specifications

Specifications

Description and Operation

Handles, Locks, Latches and Entry Systems

Diagnosis and Testing

Locks, Latches and Entry Systems

Removal and Installation

Door Lock Cylinder Cover

Exterior Door Handle (76.58.07)

Front Door Lock Actuator (76.37.74)

Front Door Lock Cylinder (76.37.71)

Luggage Compartment Lid Latch Actuator (76.19.25)

Luggage Compartment Lid Lock Cylinder (76.19.19)

Liftgate Lock Cylinder

Liftgate Latch Actuator (86.25.65.60)

Radio Frequency (RF) Receiver

Keyless Vehicle Front Antenna

Keyless Vehicle Center Antenna

Hood Latch

501-16 : Wipers and Washers *[page 314]*



Specifications

Specifications

Description and Operation

Wipers and Washers

Diagnosis and Testing

Wipers and Washers

Removal and Installation

Headlamp Washer Jet (84.20.08)

Headlamp Washer Pump (84.20.21)

Rain Sensor (84.12.10)

Windshield Washer Pump (84.10.21)

Windshield Washer Reservoir (84.10.01)

Windshield Wiper Motor - LHD RWD (84.15.13)

Windshield Wiper Motor - RHD RWD (84.15.13)

Wiper Pivot Arm (84.15.03)

501-18 : Convertible Top *[page 346]*



Specifications

Specifications

General Procedures

Convertible Top Compartment Lid Alignment

Convertible Top Alignment

Convertible Top Base Plate Adjustment

Description and Operation

Convertible Top

Diagnosis and Testing

Convertible Top

Removal and Installation

- Convertible Top Assembly (76.86.15)
- Convertible Top Headliner (76.86.16)
- Convertible Top Latch (76.86.19)
- Header Rail Upper Trim Panel (76.86.20)
- Header Rail Weatherstrip
- Convertible Top Compartment Lid
- Convertible Top Compartment Lid Trim Panel
- Convertible Top Compartment Lid Hinge
- Convertible Top Compartment Lid Moulding
- Convertible Top Compartment Lid Latch
- Convertible Top Compartment Lid Release Cables
- Convertible Top Compartment Lid Latch and Cable Assembly
- Convertible Top Motor
- Hydraulic System, Lift Cylinder and Motor
- Convertible Top Module
- Convertible Top Rear Panel Lower Weatherstrip
- Convertible Top Tension Cylinder
- Convertible Top Compartment Lid Lift Cylinder
- Convertible Top Material (76.86.12)
- Convertible Top Striker

501-19 : Bumpers [page 454]



Specifications

Specifications

Removal and Installation

Front Bumper (76.22.08)

Front Bumper Cover (76.22.78)

Rear Bumper (76.22.27)

Rear Bumper Cover (76.22.74)

501-20A : Safety Belt System [page 480]



Specifications

Specifications

Description and Operation

Safety Belt System

Diagnosis and Testing

Safety Belt System

Removal and Installation

Front Safety Belt Buckle (76.73.49)

Rear Safety Belt Buckle (76.73.50)

Rear Safety Belt Retractor - 2-Door (76.73.18)

Front Safety Belt Retractor (76.73.10)

Rear Safety Belt Retractor - Convertible (76.73.18)

501-20B : Supplemental Restraint System [page 499]



Specifications

Specifications

General Procedures

Air Bag Disposal

Description and Operation

Air Bag Supplemental Restraint System (SRS)

Diagnosis and Testing

Air Bag Supplemental Restraint System (SRS)

Removal and Installation

Front Impact Severity Sensor

Driver Air Bag Module (76.73.39)

Front Passenger Seat Occupant Classification Sensor (76.73.60)

Restraints Control Module (RCM) (76.73.48)

Passenger Air Bag Module (76.73.37)
Side Air Bag Module (76.73.47)
Rollover Protection Unit
Side Impact Sensor - Convertible (76.73.53)
Side Impact Sensor - 2-Door (76.73.53)

 501-20C : Pedestrian Protection System *[page 575]*

Specifications
 Specifications
Description and Operation
 Pedestrian Protection System
Diagnosis and Testing
 Pedestrian Protection System
Removal and Installation
 Pedestrian Protection Module
 Pedestrian Impact Sensor
 Pedestrian Protection Latch Actuator
 Pedestrian Protection Accelerometer
 Pedestrian Protection Hood Actuator LH
 Pedestrian Protection Hood Actuator RH

 501-25A : Body Repairs - General Information *[page 606]*

Description and Operation
 Body Repairs

 501-25B : Body Repairs - Corrosion Protection *[page 630]*

Description and Operation

Corrosion Protection

501-25C : Body Repairs - Water Leaks *[page 631]*

Description and Operation

Water Leaks

501-26 : Body Repairs - Vehicle Specific Information and Tolerance Checks *[page 637]*

Description and Operation

Body and Frame

501-27 : Front End Sheet Metal Repairs *[page XXX]*

Specifications

Specifications

Description and Operation

Front End Sheet Metal

Removal and Installation

Front Fender

Front Crossmember

Fender Apron Panel

Fender Apron Panel Reinforcement

Fender Apron Panel Closing Panel

Front Side Member

Side Member Deformation Element

Front Side Member Extension

Front Wheelhouse

Fender Apron Panel Front Extension

Front Side Member Side Extension

Auxiliary Front Crossmember
Front Side Member Side Extension Mounting
Front Side Member To Deformation Element Bracket
Suspension Top Mount
Front Side Member and Suspension Top Mount Assembly
Windshield Frame - Convertible

501-28 : Roof Sheet Metal Repairs [page 745]



Description and Operation
Roof
Removal and Installation
Roof Panel

501-29 : Side Panel Sheet Metal Repairs [page 758]



Description and Operation
Side Panel Sheet Metal
Removal and Installation
Rocker Panel
Bulkhead Lower Reinforcement
A-Pillar Assembly
A-Pillar Outer Panel

501-30 : Rear End Sheet Metal Repairs [page 787]



Description and Operation
Rear End Sheet Metal
Removal and Installation
Rear Wheelhouse Outer

Rear Inner Wheelhouse Half
Rear Outer Wheelhouse Half
Rear Lamp Mounting Panel
Spare Wheel Well
Rear Side Member Section
Quarter Panel Lower Extension
Quarter Panel Assembly - 2-Door
Quarter Panel Assembly - Convertible
Back Panel Assembly
Rear Side Member Closing Panel
Rear Side Member Reinforcement Panel
Water Drain Panel - Convertible
Water Drain Panel Reinforcement - Convertible

502 : Frame and Mounting



502-00 : Uni-Body, Subframe and Mounting System *[page 857]*



Specifications

Specifications

Removal and Installation

Front Subframe (76.10.05)

Rear Subframe (64.25.01)

Rear Subframe Front Bushing (64.25.34)

Rear Subframe Rear Bushing (64.25.36)